# solidMOUNT installation & maintenance
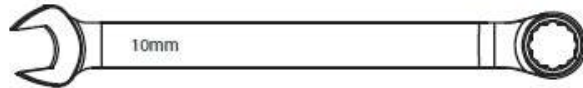
WARNING: During installation at height, use a security harness and helmet to avoid injuries.

## Necessary tools:

Hex 4 allen tool
(included in set)

10mm openend wrench

10mm

13mm wrench

13mm

10 mm horizontal precise alignment screw

U bolt

13mm nut for solidMOUNT fixing to the pole

hex head screws for bracket tightening

10 mm vertical precise alignment screw

Installation steps:

1) Mount your solidMOUNT to the LHG product. Use the included M6 hex 4 head screws and hex 4 allen tool.

2) Fix solidMOUNT to the pole. For operation use the included U bolt. It is necessary to use a 13mm wrench to tighten the nuts.

3) Use the hex 4 allen tool and untighten all hex head screws.

ATTENTION! BE CAREFUL, SCREWS CAN FALL OUT!

4) Use a 10mm wrench for precise alignment.

5) Use the hex 4 allen tool and tighten all hex head screws.

MikroTik

PID: 40947